# OFFICIAL PILOT'S CHECK LIST

ANTONOV AN-2, SHVETSOV ASh-62 nine cylinder radial engine

# **BEFORE ENGINE START**

All Doors OPEN

Battery Switch ON

Nav Lights ON

Air System Charging Valve OPEN

Parking Brake ON

Check Local ATIS Information

# USE LOAD MANAGER TO LOAD PASSENGERS, CARGO & FUEL

Contact ATC for Flightplan Clearance

Electrical Switches ON (6 switches right of Battery)

Oil Shutter Circuit Breaker ON

Engine Cowl Circuit Breaker ON

Anti Fire System Circuit Breaker ON

Chip Monitoring Button PRESS ONCE TO TEST, THEN SWITCH OFF

External Stairs STOWED (Ctrl+Shift+2 from VC)

Doors CLOSED

Contact ATC for Start Up and Pushback Clearance

### **ENGINE START**

Propeller Lever FORWARD

Mixture Lever BACKWARD (Full Rich)

Fuel Valve OPEN

Magnetos 1+2 ON

Fuel Pump Switch ON

Starter Circuit Breaker ON

Primer Pump Lever 5 TIMES

Inertial Clutch Switch INERTIAL

Inertial Clutch Switch CLUTCH (When Ampmeter shows 8)

Throttle Lever SET 700 RPM

#### PRE TAXI

Generator Switch ON

Power Inverter Switch MAIN

Avionics Switches ALL ON (Except GPS)

Fast Slave Buttons PRESS

Altimeter SET

Directional Gyro SET

Taxi Lights ON

Pitot Heat Switch ON IF OAT BELOW 0°

Contact ATC for Taxi Clearance

Throttle Lever REDUCE BEFORE TAXI OUT

Parking Brake OFF

#### **HOLD SHORT**

Trim Switches SET

Flaps SET (15°)

Cowl Flaps Switch OPEN

Oil Cooler Shutter Switch OPEN

External Lights TAXI OFF

External Lights LANDING ON

External Lights STROBE ON

## TAKE OFF

Rotate 90 Km/h (If Flaps 15° - otherwise 140 Km/h)

# **CLIMB**

Above 150 Ft FLAPS 10°

Above 140 Km/h FLAPS 0°

Climb Rate 600 Ft/Min OR 150 Km/h

Lights AS REQUIRED

## **CRUISE**

Monitor Engine Performance

Oil Temperature 60-75°

Cylinder Head Temperature 150-215°

50nm from destination - Check ATIS Information

#### **DESCENT**

#### Contact ATC for Descent Clearance

Rate of Descent 190 - 220 Km/h (Turbulent - Calm)

Carburetor Heat ON IF OAT BELOW -15°

Flaps AS REQUIRED

#### **APPROACH**

Propeller Lever FORWARD

Approach Speed MAX 140 Km/h

Flaps AS REQUIRED (15°)

Landing Lights ON

Tail Wheel Lock ON

#### **TAXI TO GATE**

# Contact ATC for Parking Information

Tail Wheel Lock OFF

Landing Lights and Strobe Light OFF

Taxi Lights ON

Flaps UP

# **ARRIVAL AT GATE**

Parking Brake ON

Doors OPEN

External Stairs LOWERED (Ctrl+Shift+2 from VC)

Pitot Heat Switch OFF

Avionics Switches OFF

Throttle Lever SET 800 RPM

Cylinder Head Temperature ALLOW TO COOL TO BELOW 120°

Electrical Switches OFF

Throttle Lever SET 1700 RPM, THEN 800 RPM

Fuel Valve CLOSED

Throttle Lever SET 0 RPM

Cowl Flaps Switch CLOSED

Oil Cooler Shutter Switch CLOSED

Air System Charging Valve OPEN

Oil and Air System Purge DONE

Lights OFF